



Xcluder[®] Heavy Duty Pest Control Door Sweep Installation Instructions *Use for Part #s: 162603, 162623,*

Thank you for your purchase of an **Xcluder[®] Heavy Duty Pest Control Door Sweep**, the best way to close the door on unwanted pests.


Tools Required:

1. 5/16" nut driver or socket set
2. Flat-head screwdriver
3. Drill and 5/32" bit
4. Hacksaw or reciprocating saw— *only needed if the sweep needs to be trimmed to fit*
5. Sturdy scissors - *only needed if the sweep needs to be trimmed to fit*




Installation Instructions:

1. Sweep should be mounted on the outside of the door with the countersunk side of the pre-drilled screw holes facing out.
2. Measure door and cut sweep to fit, if necessary.
3. When cutting the sweep, fastest results can be attained by using a powered reciprocating saw to cut through the steel retainer, but a hacksaw can also be used. Make the cut starting at the topmost portion of the door sweep. Use sturdy shears to cut the rubber and Xcluder[®] filling. Sawing through Xcluder[®] filling is not recommended.
4. Using the end of the sweep with the metal end guards already installed as a model, install the end guards on the opposite end of the sweep:
 - a. Using a standard screwdriver, gently separate Xcluder[®] filling from the metal mesh in a 1/2" wide x 3/4" deep section at the middle of both faces on the sweep.
 - b. Place an end clip on its side on a hard, flat, sturdy surface.
 - c. Hold the end guard and drive the standard screwdriver blade into the end guard at the looped end. This will separate the open end.
 - d. Place the opened end guard, flat side out, onto one of the edges of the door sweep in the location the Xcluder[®] filling was separated from the metal mesh.
 - e. Holding the end guard in place with your thumb, pull the screwdriver from the end guard.
 - f. Using the screwdriver handle, tap the Xcluder[®] end guard flush with the edge of the door sweep. Repeat for the second clip placing it next to the first clip.
 - g. Repeat steps a-f for the remaining unguarded door sweep edge.

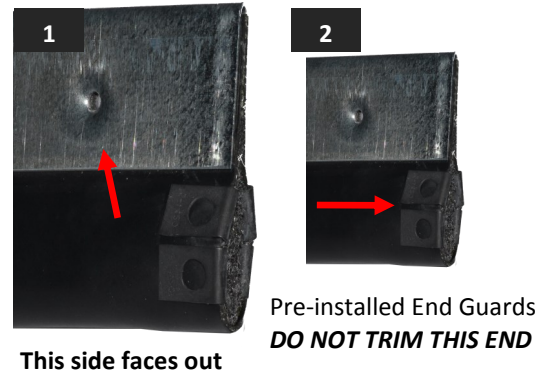

This side faces out

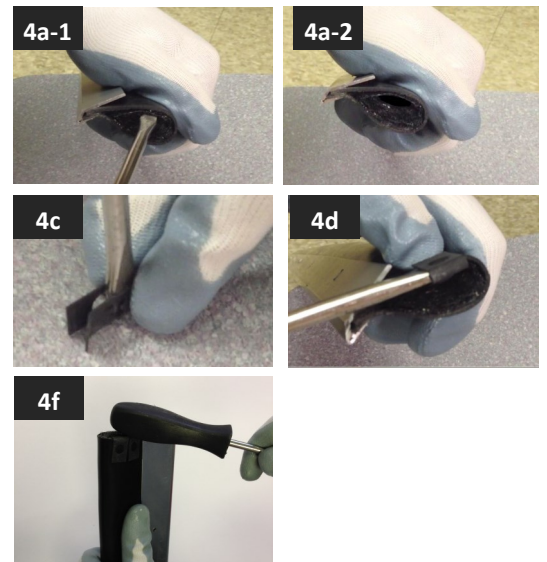



Xcluder[®] Heavy Duty Pest Control Door Sweep Installation Instructions *Use for Part #s: 162603, 162623,*

Installation Instructions: (Continued)

5. With the door closed, hold the sweep at bottom of the door and tap down until contact is made between the sweep and the threshold.

IMPORTANT: Make sure the door sweep makes even contact with the threshold or floor across its width

6. Using the sweep as a template, mark the location of the screw holes on the door.

7. Drill the pilot holes for the mounting screws using a 5/32" bit.

8. Use the 5/16" nut driver and attach the sweep with the stainless steel mounting screws and the.