



Xcluder Roll-up DoorSeal Installation


Use for Part #s: 562688

7. Thread the Xcluder Roll Up Door Seal onto the “T” retainer(s). A properly cut and positioned seal will protrude about two to three inches from the “T” retainer on both ends.

NOTE: Silicon spray or soapy water as a lubricant will help the seal slide into the retainer more easily.



8. Install and crimp the end clips on to each end of the Xcluder Roll-up Door Seal.

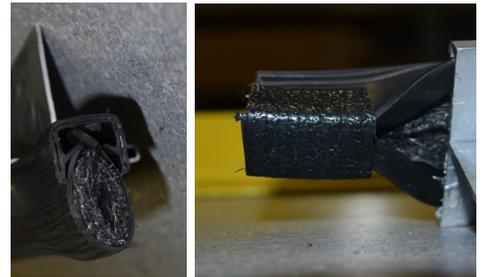

9. Re-install “L” brackets with “T” retainer. The “T” retainer should be mounted on the outer side of the roll up door’s bottom bar. The outer “L” bracket is placed on top of the “T” retainer.



10. Fit the rubber portion of the Xcluder Roll-up Door Seal inside the roll-up door guides.



Version—BG 0520